

BMW S 1000RR '19-'21
BMW S 1000R '20-'21
BMW S 1000XR '20-'21

M O U N T I N G I N S T R U C T I O N S

REF 21503N

TAPAS LATERAL IZQUIERDO / LEFT SIDE COVERS

ATENCION: Tapas con avisador de desgaste homologadas por la Federación Internacional de Motociclismo (FIM). Aptas para uso en competición.
ATTENTION: Covers with a wear warning device approved by the International Motorcycling Federation (FIM). Suitable for use in competition.
ATTENTION: Protections Carters avec temoins d'usure Homologues par la FIM (Federation Internationale de Motocyclisme). Convient pour un usage en competition.
ACHTUNG: Abdeckungen mit einer von der International Motorcycling Federation (FIM) zugelassenen Verschleißwarnvorrichtung. Geeignet für den Einsatz im Wettkampf.



1 Person




30 min



EASY

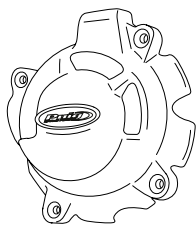

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Tapa izquierda	Left cover	1	CONJUNTO--20215
2		Tornillo M6x40 DIN6921	M6x40 DIN6921 screw	4	-

CONSULTAR EN NUESTRA PAGINA WEB LA DISPONIBILIDAD DEL VIDEO DE MONTAJE DE ESTA REFERENCIA.
CONSULT OUR WEBSITE THE VIDEO MOUNT AVAILABILITY OF THIS REFERENCE.



**BMW S 1000RR '19-'21
BMW S 1000R '20-'21
BMW S 1000XR '20-'21**


REF 21503N

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

DESMONTAR EL CARENADO /
REMOVE THE COVER


DISASSEMBLY
DESMONTAJE

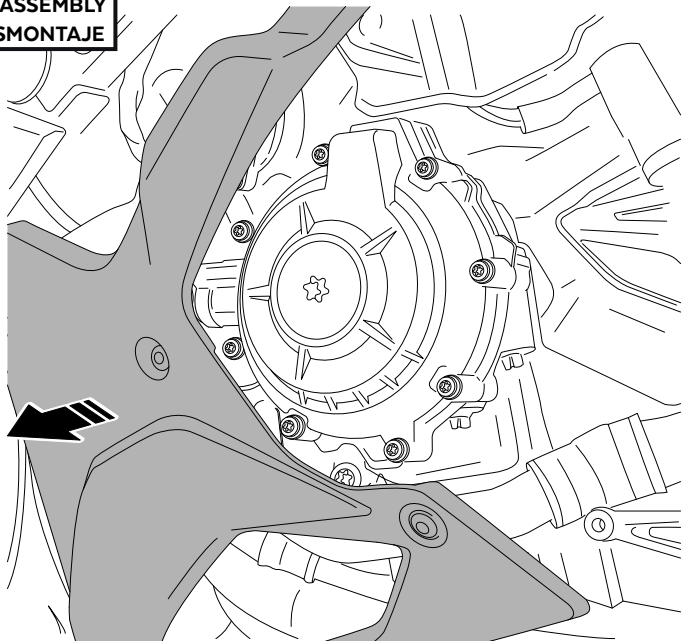

2

A Tornillería original
Original screws

DISASSEMBLY
DESMONTAJE

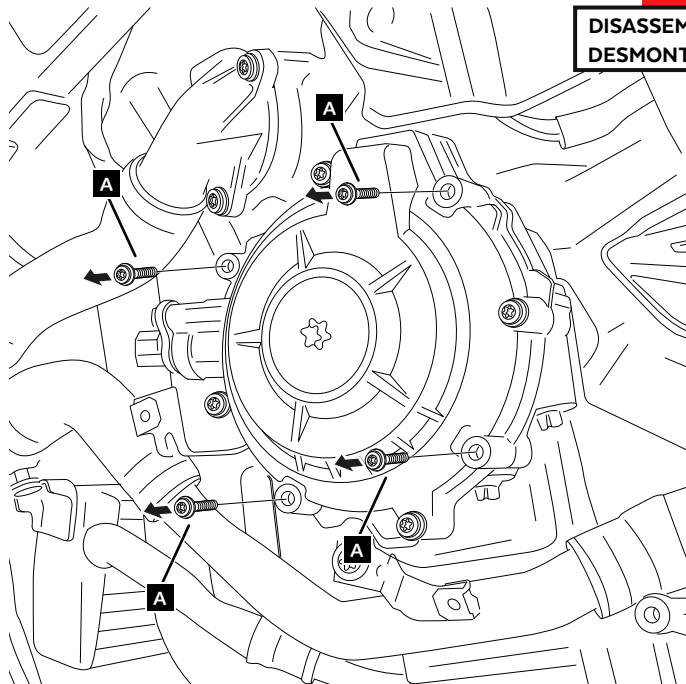


3

ASSEMBLY
MONTAJE

TUBE



8mm

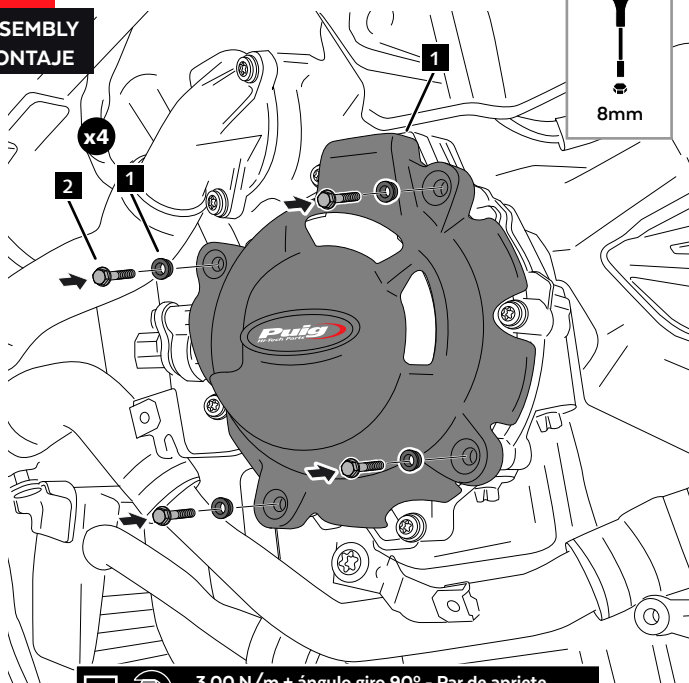


2 3,00 N/m + ángulo giro 90° - Par de apriete
2,21 lbf/ft + turning angle 90°- Tightening torque

4

MONTAR EL CARENADO /
ASSEMBLE THE COVER

ASSEMBLY
MONTAJE

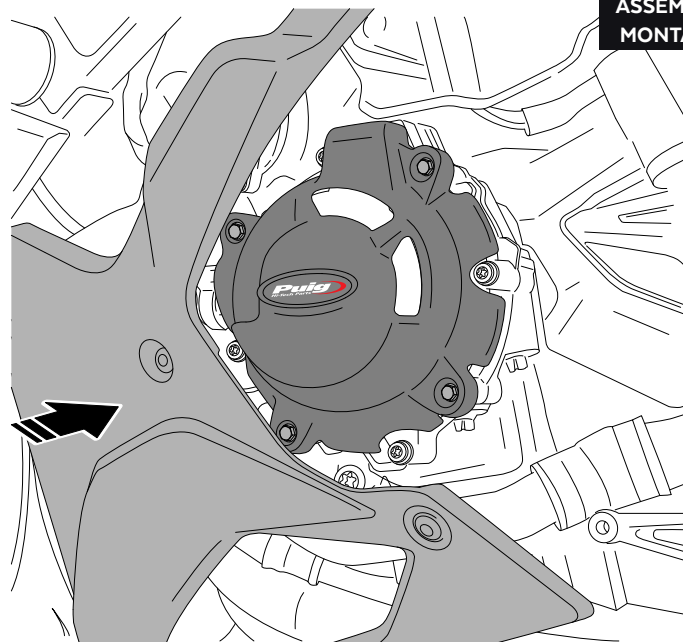

BMW S 1000RR '19-'21
BMW S 1000R '20-'21
BMW S 1000XR '20-'21

M O U N T I N G I N S T R U C T I O N S

REF 21503N

TAPAS LATERAL DERECHO / RIGHT SIDE COVERS



1 Person




30 min



EASY

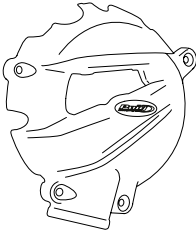

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Tapa derecha 1	Right cover 1	1	CONJUNTO--20215
2		Tapa derecha 2	Right cover 2	1	CONJUNTO--20215
3		Tornillo M6x15 DIN6921	M6x15 DIN6921 screw	1	-
4		Tornillo M6x40 DIN6921	M6x40 DIN6921 screw	6	-

**BMW S 1000RR '19-'21
BMW S 1000R '20-'21
BMW S 1000XR '20-'21**


REF 21503N

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

DISASSEMBLY
DESMONTAJE


DESMONTAR EL CARENADO /
REMOVE THE COVER

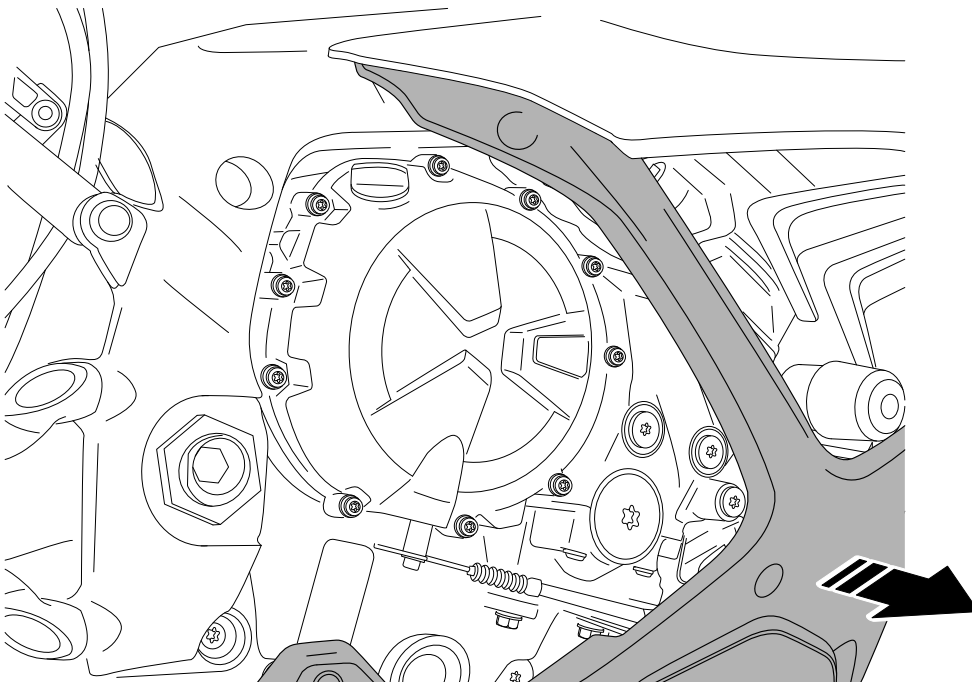

2

DISASSEMBLY
DESMONTAJE

A Tornillería original
Original screws

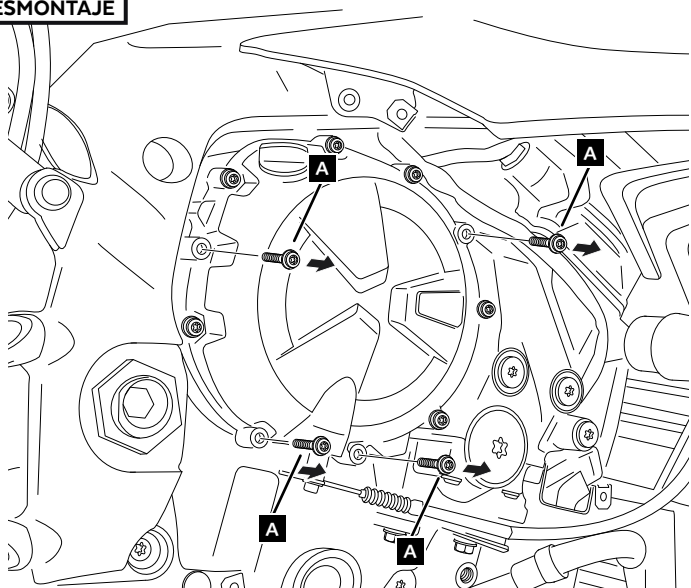


3

ASSEMBLY
MONTAJE

TUBE



8mm

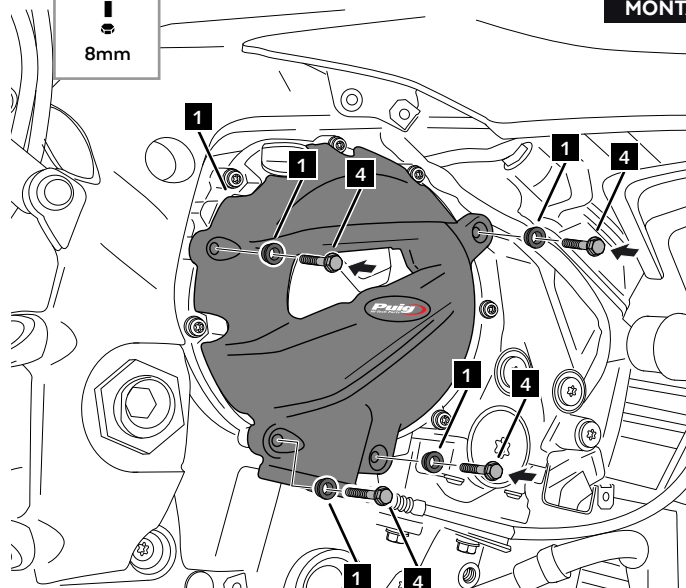

4-5



3,00 N/m + ángulo giro 90° - Par de apriete
2,21 lbf/ft + turning angle 90° - Tightening torque


**BMW S 1000RR '19-'21
BMW S 1000R '20-'21
BMW S 1000XR '20-'21**

REF 21503N

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

4


DISASSEMBLY
DESMONTAJE

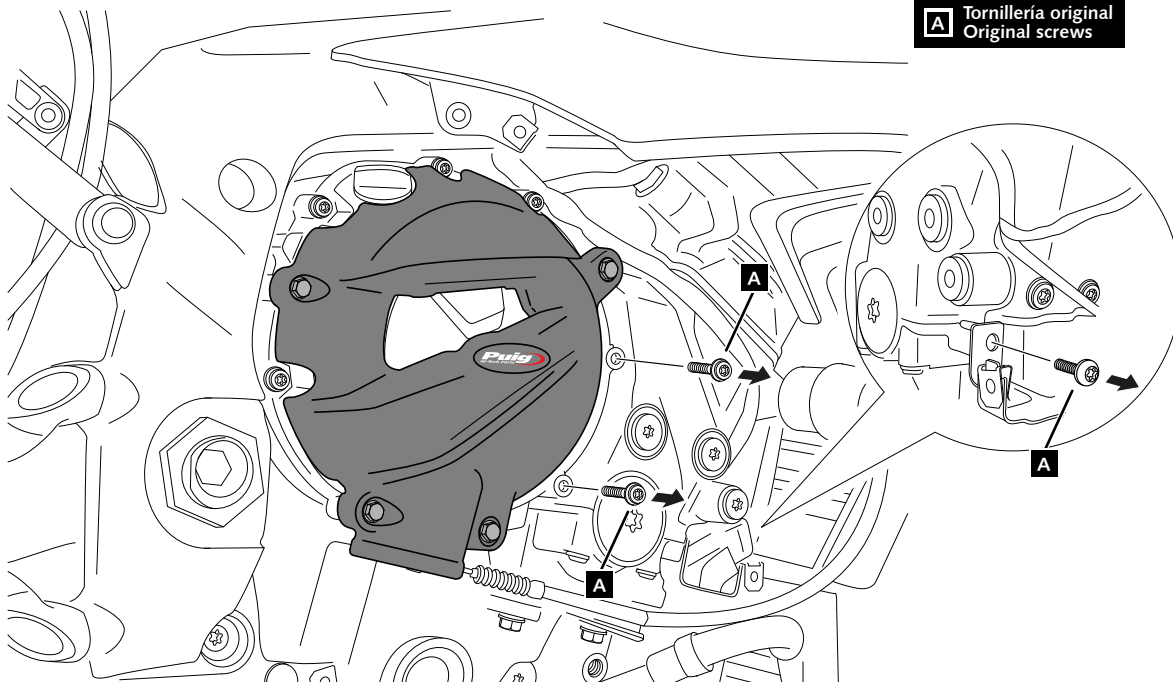

A Tornillería original
Original screws

5

ASSEMBLY
MONTAJE

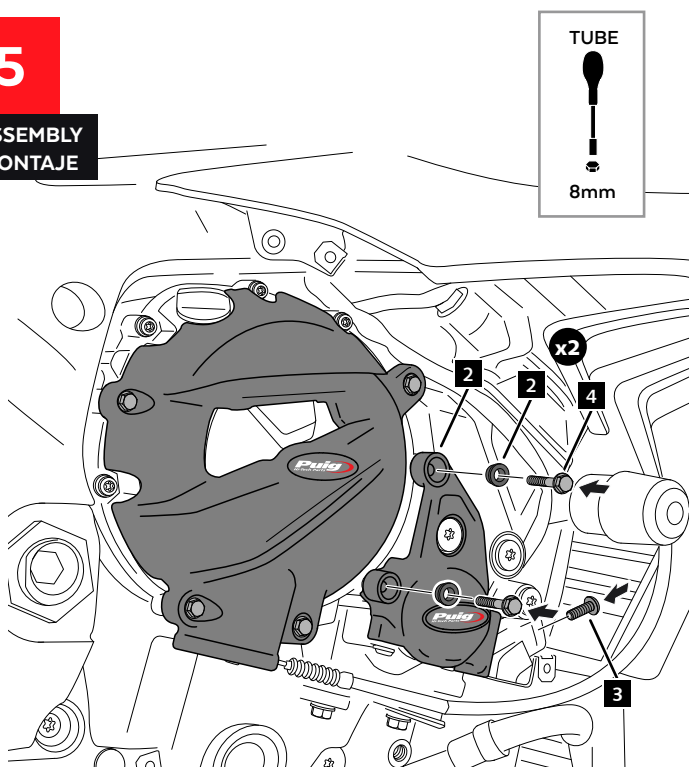

4 9,00 N/m - Par de apriete
6,64 lbf/ft - Tightening torque

MONTAR EL CARENADO /
ASSEMBLE THE COVER

6

ASSEMBLY
MONTAJE

