

HONDA CL500 '23-

M O U N T I N G I N S T R U C T I O N S




REF 21635

PLACA FRONTAL DE ABS / ABS FRONT PLATE



ALLEN

Nº 3
Nº 5

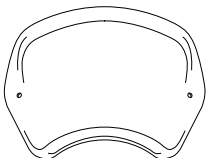
ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Placa frontal ABS	ABS front plate	1	10526C/JM3
2		Soporte derecho (R)	Right support (R)	1	SOPOR2P7-R21635
3		Soporte izquierdo (L)	Left support (L)	1	SOPOR2P7-R21635
4		Tornillo Allen M5x20 Ø11 ISO 7380	M5x20 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-730
5		Casquillo Ø8,5x Ø13x 9	Ø8,5x Ø13x 9 arrowhead	4	CASQUI-----777
6		Silentblock M5	M5 silentblock	2	SILENBTM5-046/1
7		Arandela de nylon M5x1	M5x1 nylon washer	2	ARNV00000000245
8		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-493
9		Tapón tornillo M5	M5 screw cap	2	TAPON-----85
10		Tope de goma Ø3,7-3,8 x 3,2mm	Ø3,7-3,8 x 3,2mm bumper foot	4	TOPE--POF-40022

HONDA CL500 '23-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

**DISASSEMBLY
DESMONTAJE**

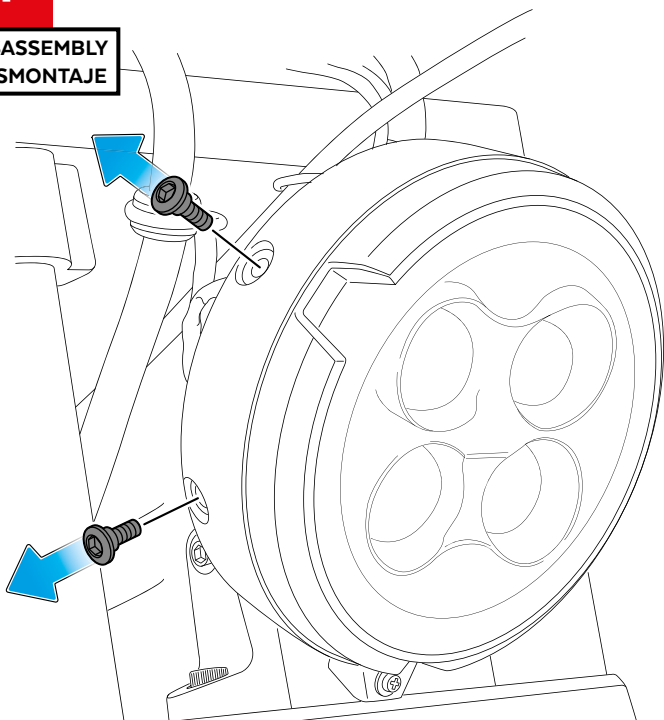


2

**ASSEMBLY
MONTAJE**

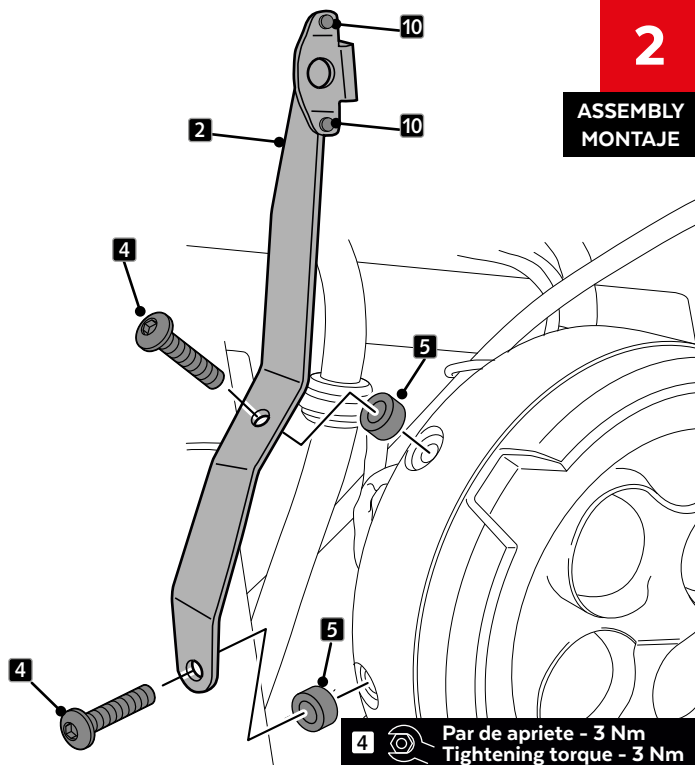


3

**DISASSEMBLY
DESMONTAJE**

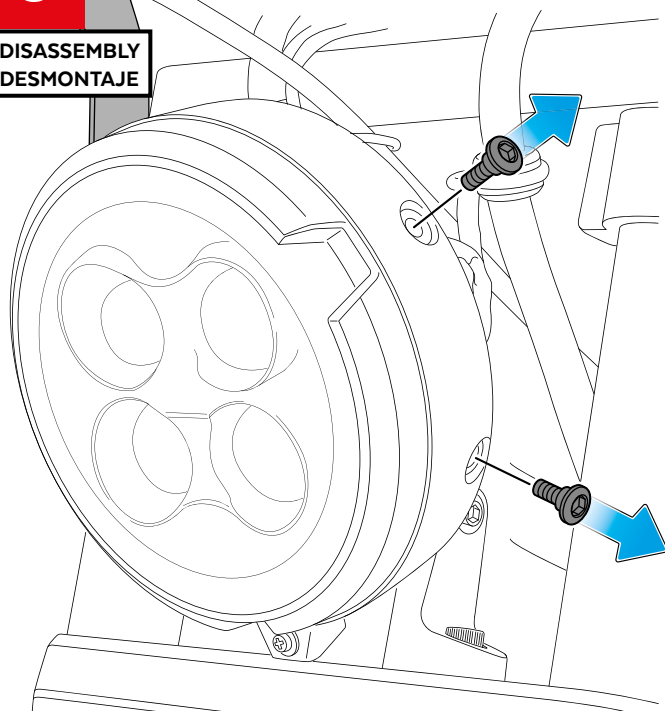

4

**ASSEMBLY
MONTAJE**

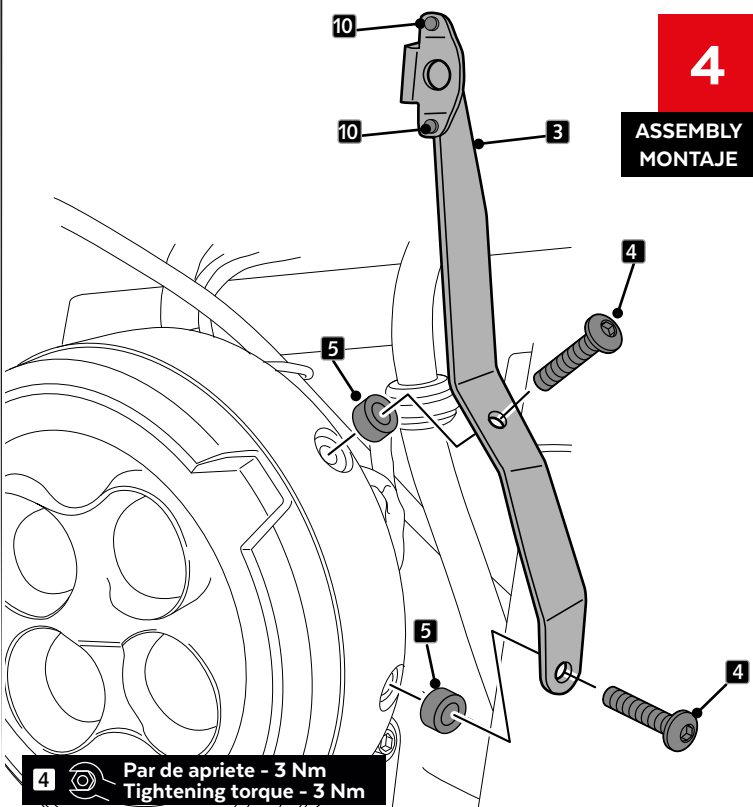


HONDA CL500 '23-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


5

ASSEMBLY
MONTAJE

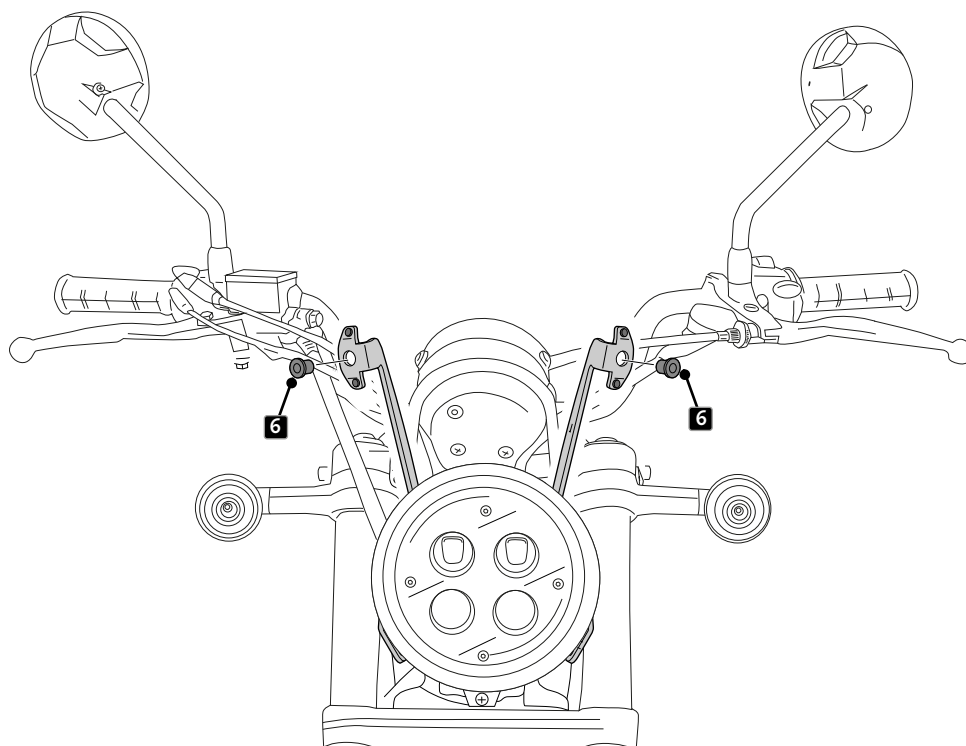

6

ASSEMBLY
MONTAJE

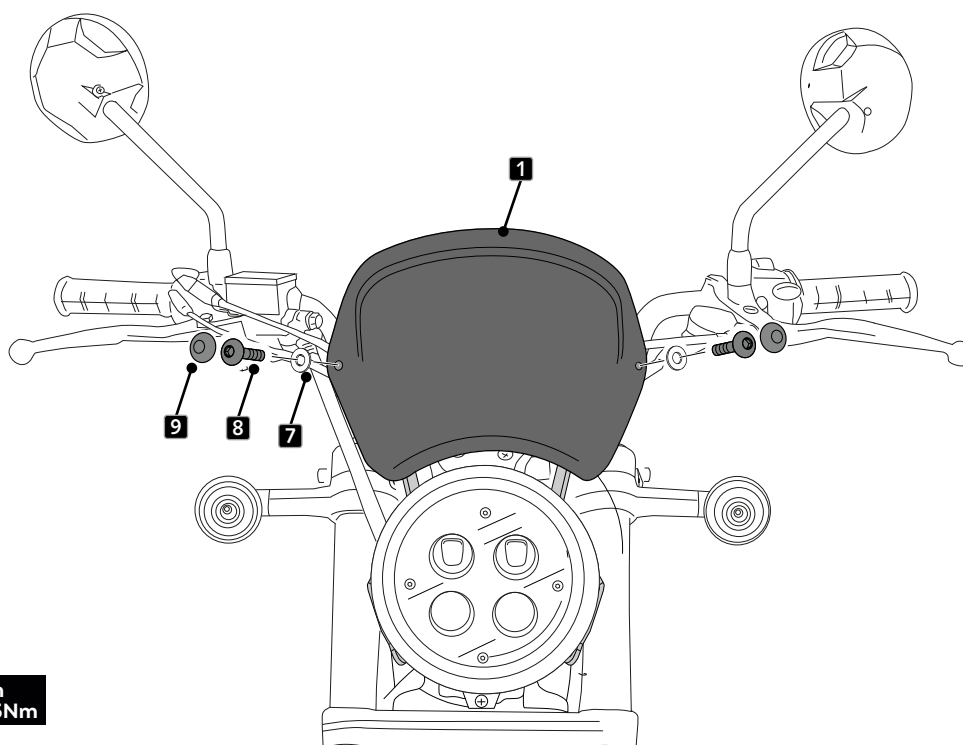

8



Par de apriete - 2,5 Nm
Tightening torque - 2,5Nm