

BMW F900R '20-

M O U N T I N G I N S T R U C T I O N S

REF 22488

WINDSHIELD NG TOURING (OEM SUPPORT)



1 Person



15 min



EASY



WITH ORIGINAL BMW SUPPORT






Nº 11



TORX
T25
T40



ALLEN
Nº 3

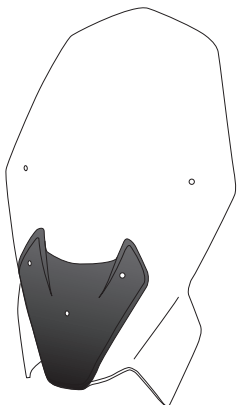
ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula TOURING	TOURING screen	1	10776W/H/F/N
2		Soporte metálico de refuerzo derecho	Reinforcement right metal support	1	SOPOR2P2-R22488
3		Soporte metálico de refuerzo izquierdo	Reinforcement left metal support	1	SOPOR2P2-L22488
4		Tornillo Allen M8X50 DIN912	M8X50 DIN912 Allen screw	2	TORNI-D912--532
5		Casquillo Ø8XØ14X7,5	Ø8XØ14X7,5 arrowhead	2	CASQUI8147-0193
6		Tornillo especial M5X15 long. hexagonal 14	M5x15 special screw hexagonal length 14	3	TORNI-EM5---513
7		Silentblock Ø9XØ6X8mm	Ø9XØ6X8mm silentblock	5	AROPASACABLES-3
8		Casquillo con valona Ø12XØ6,8X7,3	Ø12XØ6,8X7,3 bush with blange	5	CASQUI-1A---750
9		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	5	TORNI-I7380-493
10		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Allen cap screw	5	TAPON-----85

BMW F900R '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

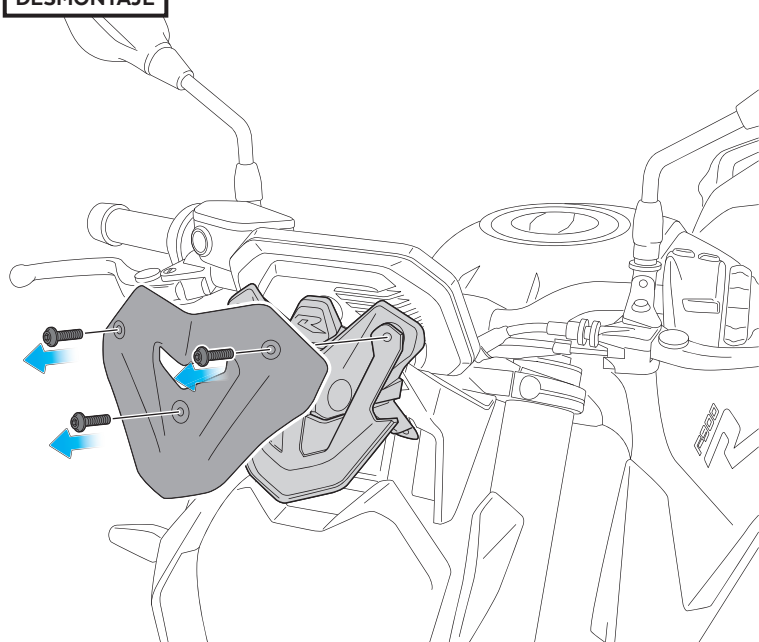


2

ASSEMBLY
MONTAJE

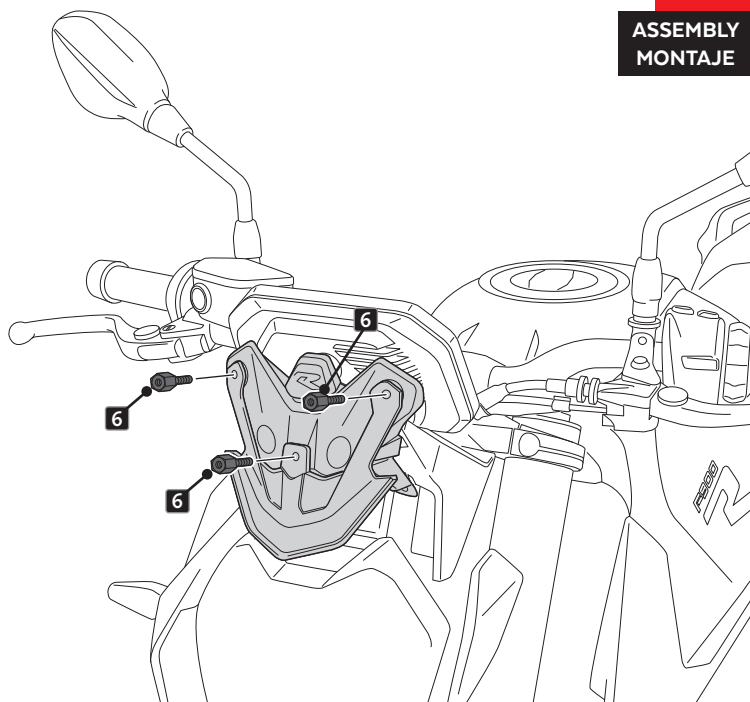


3

ASSEMBLY
MONTAJE

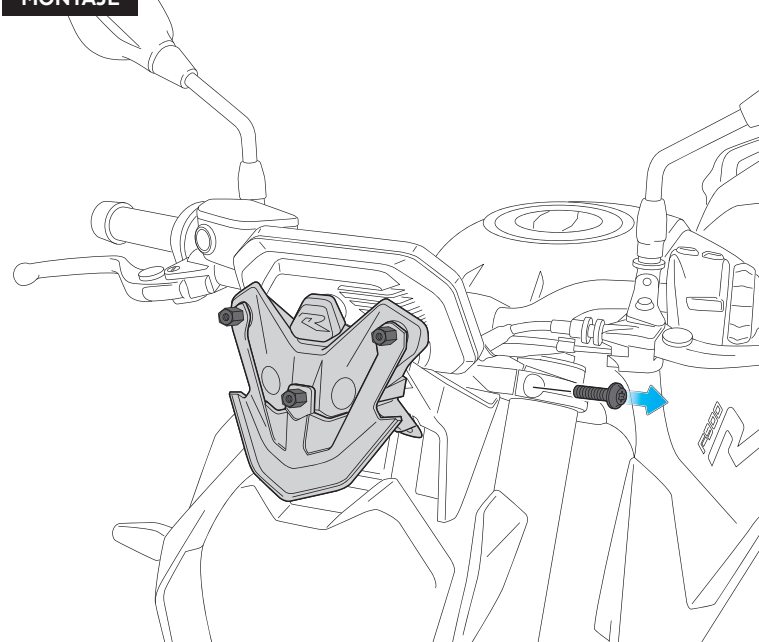

4

ASSEMBLY
MONTAJE

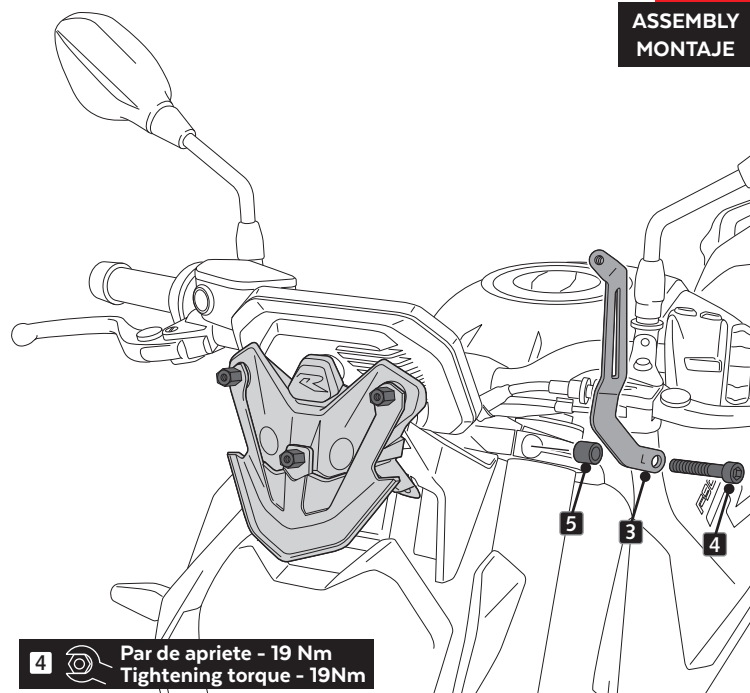


4  Par de apriete - 19 Nm
Tightening torque - 19Nm

BMW F900R '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


5

ASSEMBLY
MONTAJE

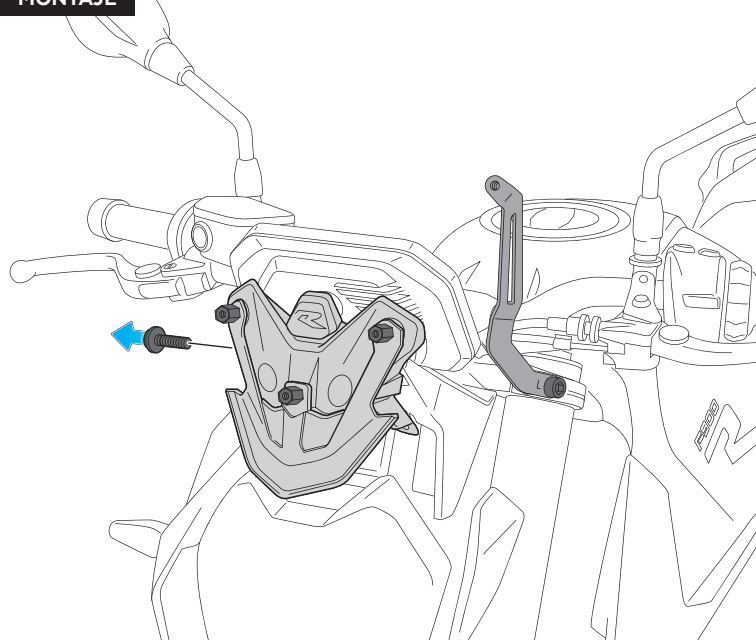


6

ASSEMBLY
MONTAJE

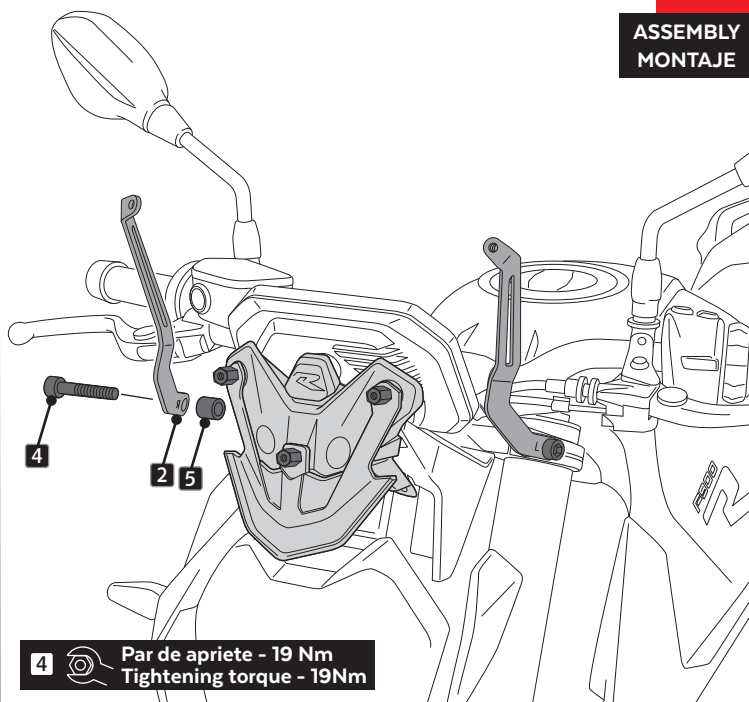

7

ASSEMBLY
MONTAJE

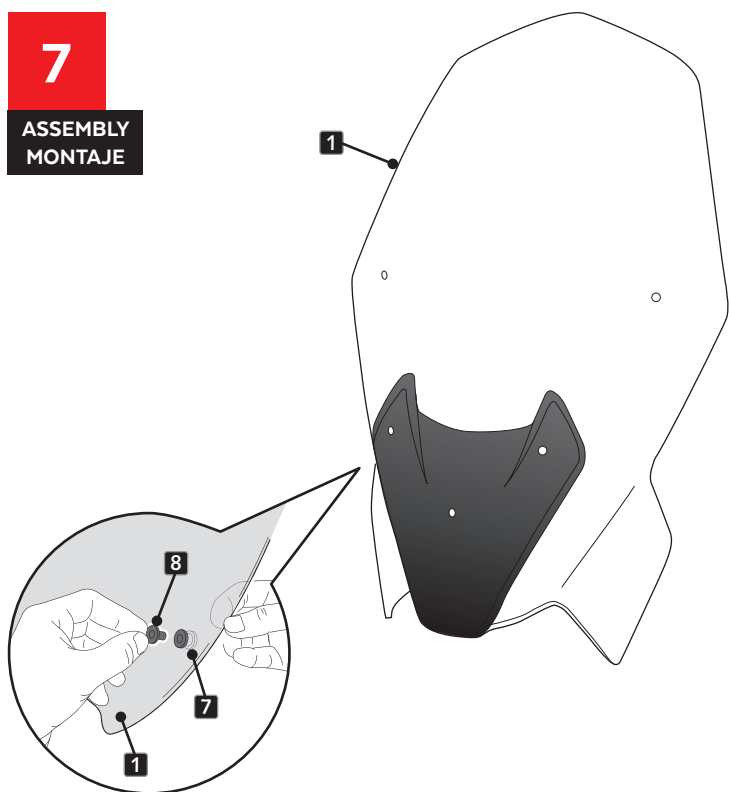

8

ASSEMBLY
MONTAJE

