

BMW R1300GS '24-

M O U N T I N G I N S T R U C T I O N S

REF 22308

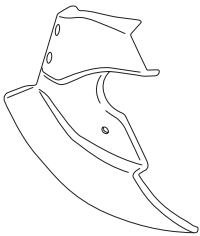
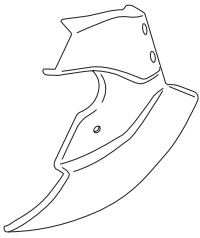


BRAKE COOLER



TO MOUNT THE PUIG BRAKE COOLER YOU NEED TO HAVE PUIG FRONT FENDER MOUNTED

TORX
T25
T35

ALLEN
Nº 3


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Brake Cooler derecho	Right brake cooler	1	22308JM3
2		Brake Cooler izquierdo	Left brake cooler	1	22308JM3
3		Soporte izquierdo (L)	Left support (L)	1	SOPOR2P3-L22308
4		Soporte derecho (R)	Right support (R)	1	SOPOR2P3-R22308
5		Tapón tornillo M5 DIN7991	M5 DIN7991 screw cap	6	TAPON-----92
6		Tornillo M5x12 DIN7991	M5x12 DIN7991 Allen screw	6	TORNI-D7991-611
7		Arandela de goma Ø4,5 x Ø11 x 2mm	Ø4,5 x Ø11 x 2mm Rubber washer	6	ARAND-EPDM--722

BMW R1300GS '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

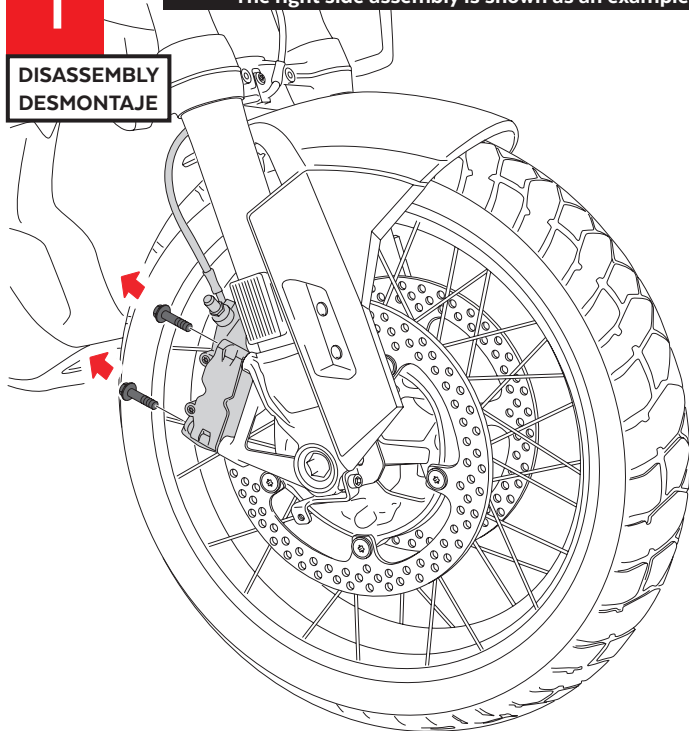**DISASSEMBLY
DESMONTAJE**



2

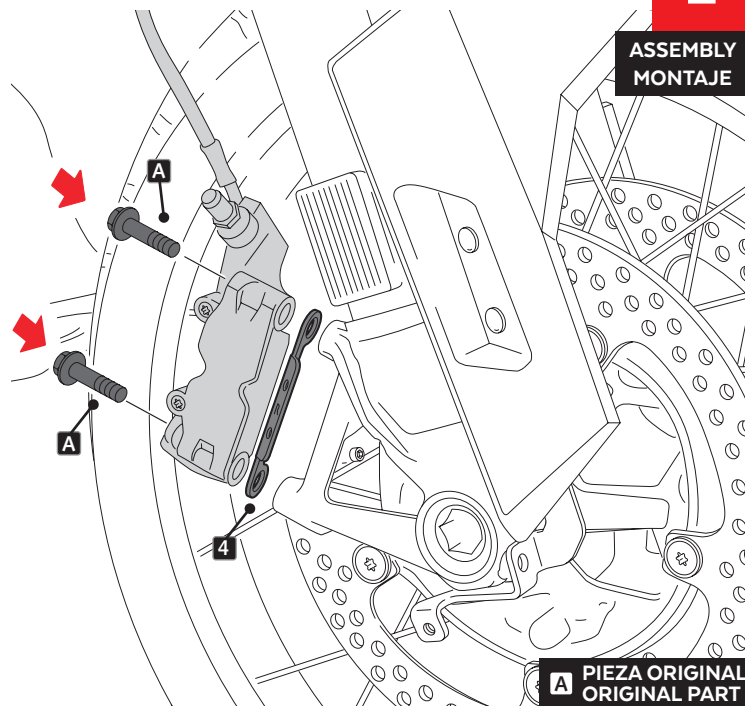**ASSEMBLY
MONTAJE**



3

**ASSEMBLY
MONTAJE**

