

# BMW R1300GS '24-

## M O U N T I N G I N S T R U C T I O N S

REF 22311

TANK COVER PROTECTOR



1 Person



15 min




EASY



TORX  
T25

ALLEN  
Nº 3

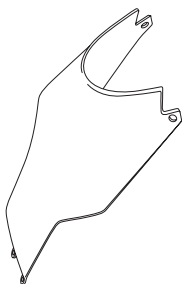
| ID | PIEZA/PART                                                                          | DESCRIPCIÓN                       | DESCRIPTION                       | QTY | REF             |
|----|-------------------------------------------------------------------------------------|-----------------------------------|-----------------------------------|-----|-----------------|
| 1  |  | Protector cubierta depósito       | Tank cover protector              | 1   | 22311N/JM3      |
| 2  |  | Silentblock Ø18x Ø9 xØ11 x8       | Ø18x Ø9 xØ11 x8 silentblock       | 2   | SILENBGONE--064 |
| 3  |  | Tornillo Allen M5x20 Ø11 ISO 7380 | M5x20 Ø11 ISO 7380 Allen screw    | 2   | TORNI-I7380-730 |
| 4  |  | Arandela de nylon M5              | M5 Nylon washer                   | 2   | ARNV0000000245  |
| 5  |  | Tapón tornillo M5 ISO 7380        | M5 ISO 7380 Screw cap             | 2   | TAPON-----85    |
| 6  |  | Cinta adhesiva de doble 10x30mm   | 30x10mm double-side adhesive tape | 6   | ADHESI-----263  |

# BMW R1300GS '24-

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

DISASSEMBLY  
DESMONTAJE

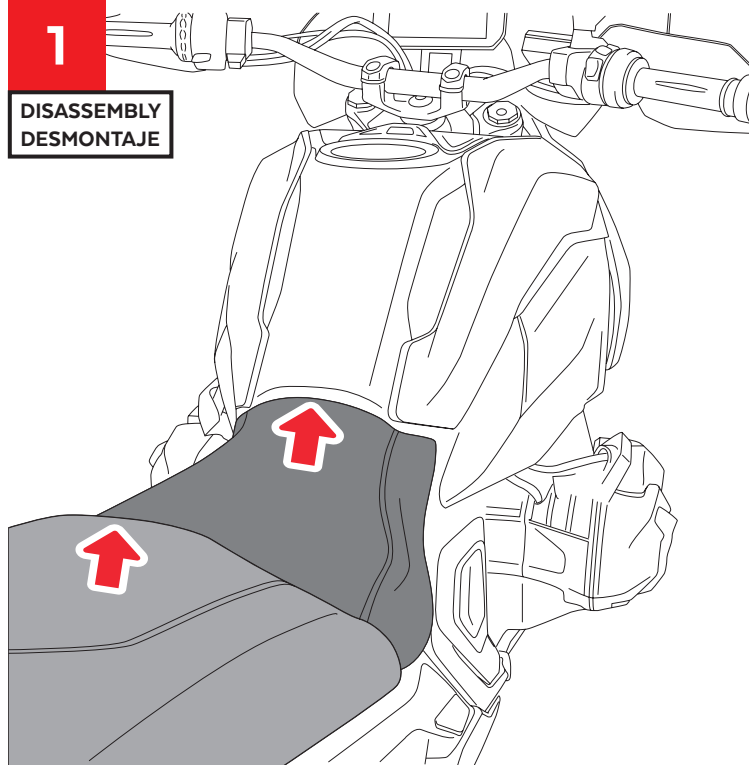


**2**

DISASSEMBLY  
DESMONTAJE

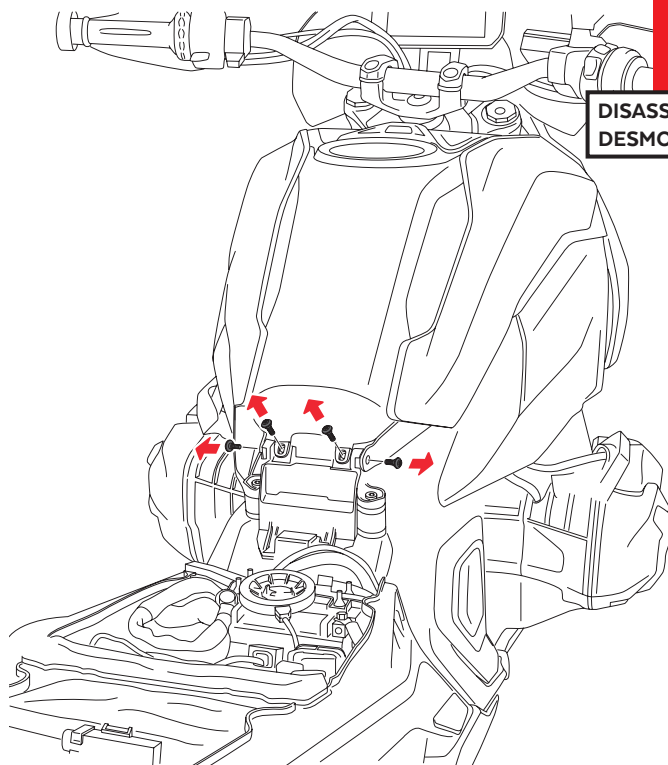


**3**

DISASSEMBLY  
DESMONTAJE

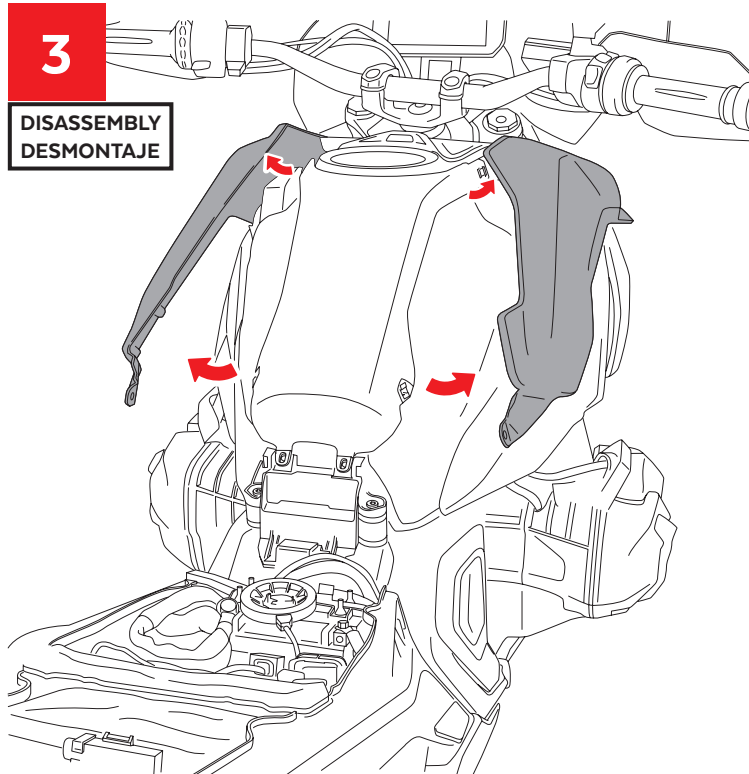

**4**

PREASSEMBLY  
PREMONTAJE

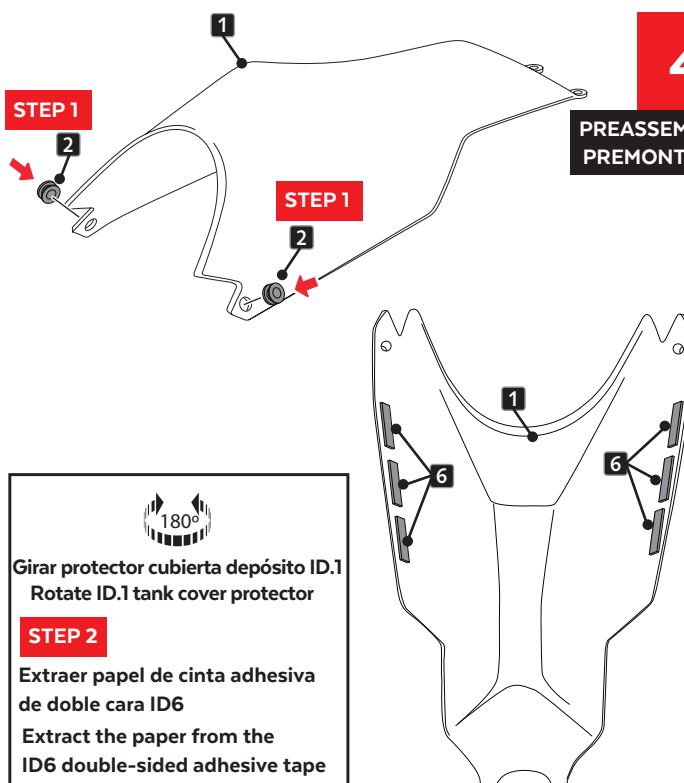

STEP 1

2

STEP 1

2



Girar protector cubierta depósito ID.1  
Rotate ID.1 tank cover protector

STEP 2


Extraer papel de cinta adhesiva  
de doble cara ID6  
Extract the paper from the  
ID6 double-sided adhesive tape

# BMW R1300GS '24-

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**5**

ASSEMBLY  
MONTAJE

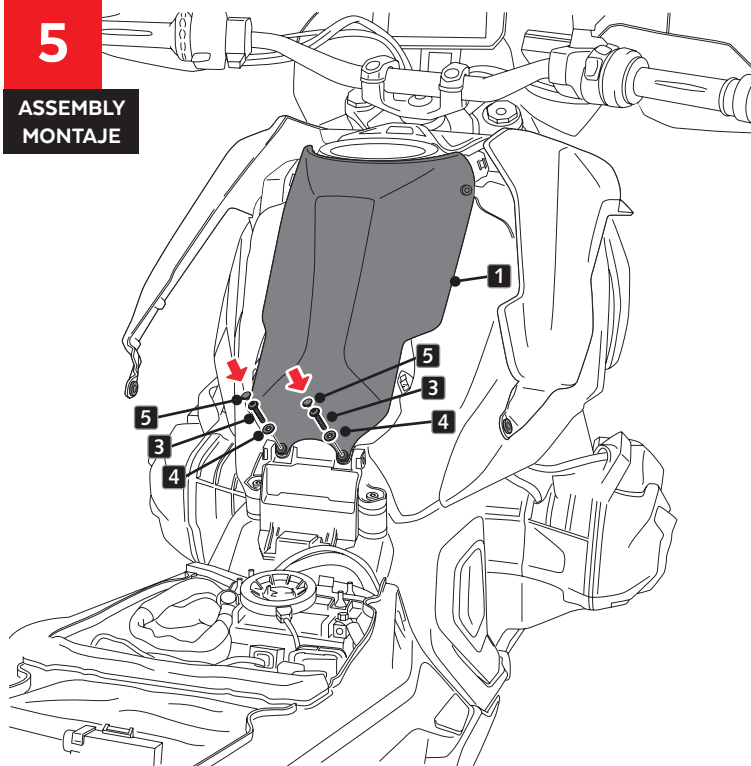


**6**

ASSEMBLY  
MONTAJE

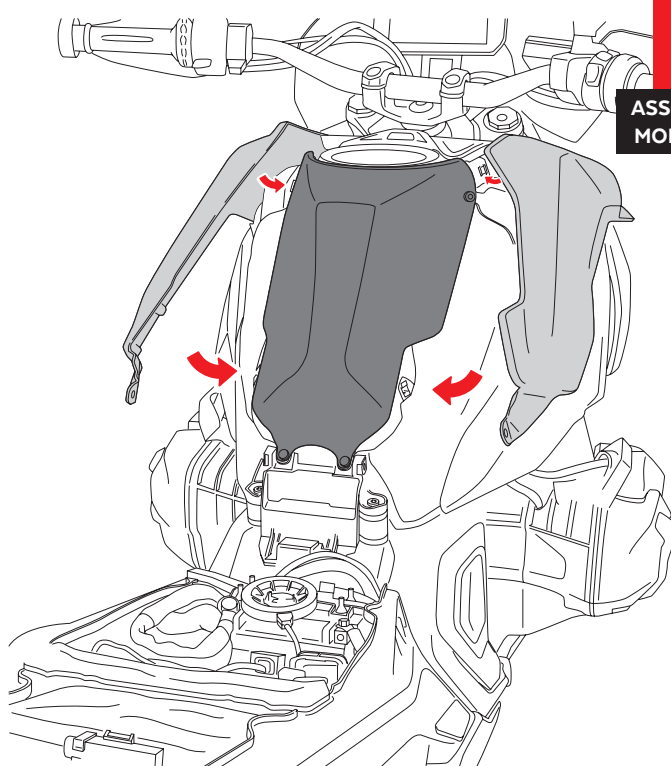

**7**

ASSEMBLY  
MONTAJE

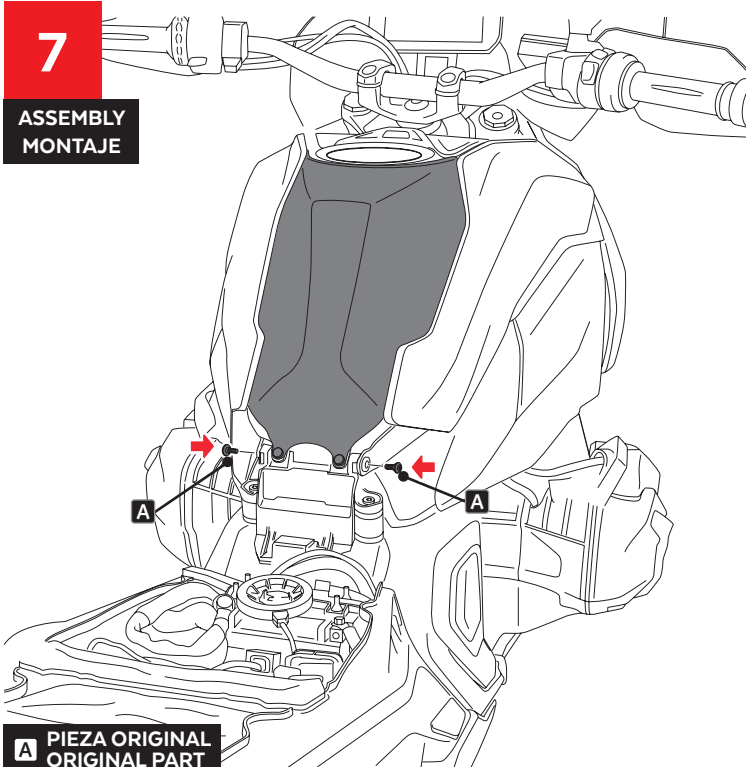

**A** PIEZA ORIGINAL  
ORIGINAL PART

**8**

ASSEMBLY  
MONTAJE

