

HONDA CBR600RR '13-

M O U N T I N G I N S T R U C T I O N S

REF 22695

AERO WHEEL DEFLECTOR



Nº 12
Nº 14



ALLEN
Nº 3



ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Deflector Aero Rueda derecho	Right Aero Wheel deflector	1	11074 J/N/CM3
2		Deflector Aero Rueda Izquierdo	Left Aero Wheel deflector	1	11074 J/N/CM3
3		Soporte derecho (●)	Right support (●)	1	SOPOR2P1-R22695
4		Soporte Izquierdo	Left support	1	SOPOR2P1-L22695
5		Tapón tornillo M5 DIN7991	M5 DIN7991 screw cap	4	TAPON-----92
6		Tornillo M5x12 DIN7991	M5x12 DIN7991 Allen screw	4	TORNI-D7991-611
7		Arandela de goma Ø4,5 x Ø11 x 2mm	Ø4,5 x Ø11 x 2mm Rubber washer	4	ARAND-EPDM--722
8		Tope de goma Ø10,5 x Ø7,9 mm	Ø10,5 x Ø7,9 mm Bumper foot	2	TAPON-----95
9		Arandela M10 DIN125A	M10 DIN125 washer	2	ARAND-PIM10-574


HONDA CBR600RR '13-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

Se muestra el montaje del lado derecho a modo de ejemplo, realizar los mismos pasos para el montaje del lado izquierdo.
The right side assembly is shown as an example, so the same steps can be performed for the left side assembly.

1


**DISASSEMBLY
DESMONTAJE**

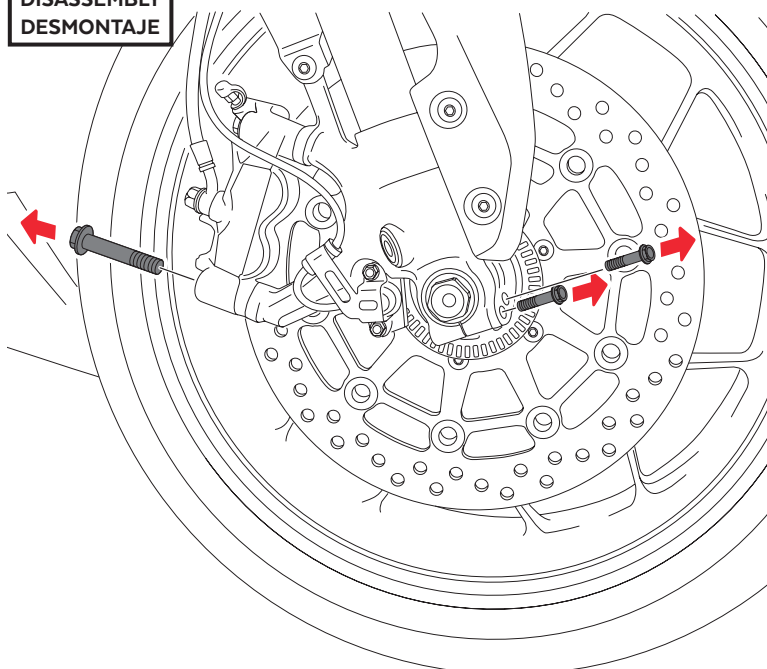

2

**ASSEMBLY
MONTAJE**

! ID.9 M10 WASHER IS NOT NECESSARY IF YOU HAVE MOUNTED THE AIR DUCT REF. 22694

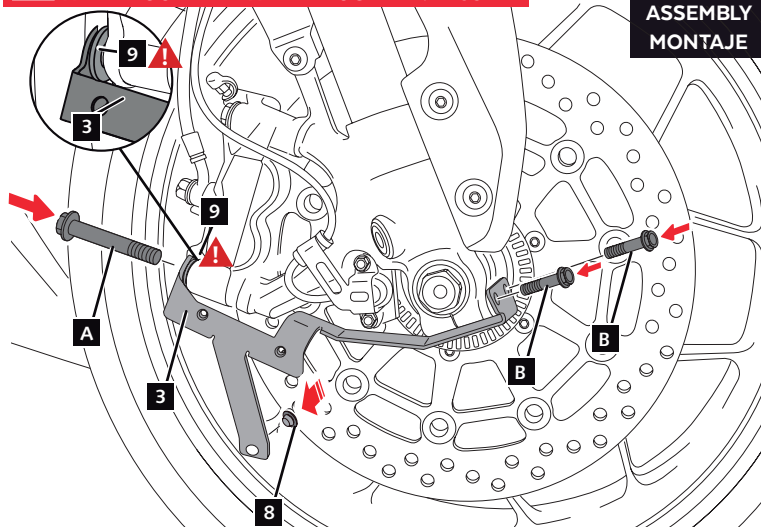

A PIEZA ORIGINAL
ORIGINAL PART


B PIEZA ORIGINAL
ORIGINAL PART

A Par de apriete - 30 Nm
Tightening torque - 30 Nm

B Par de apriete - 22 Nm
Tightening torque - 22 Nm

3

**ASSEMBLY
MONTAJE**

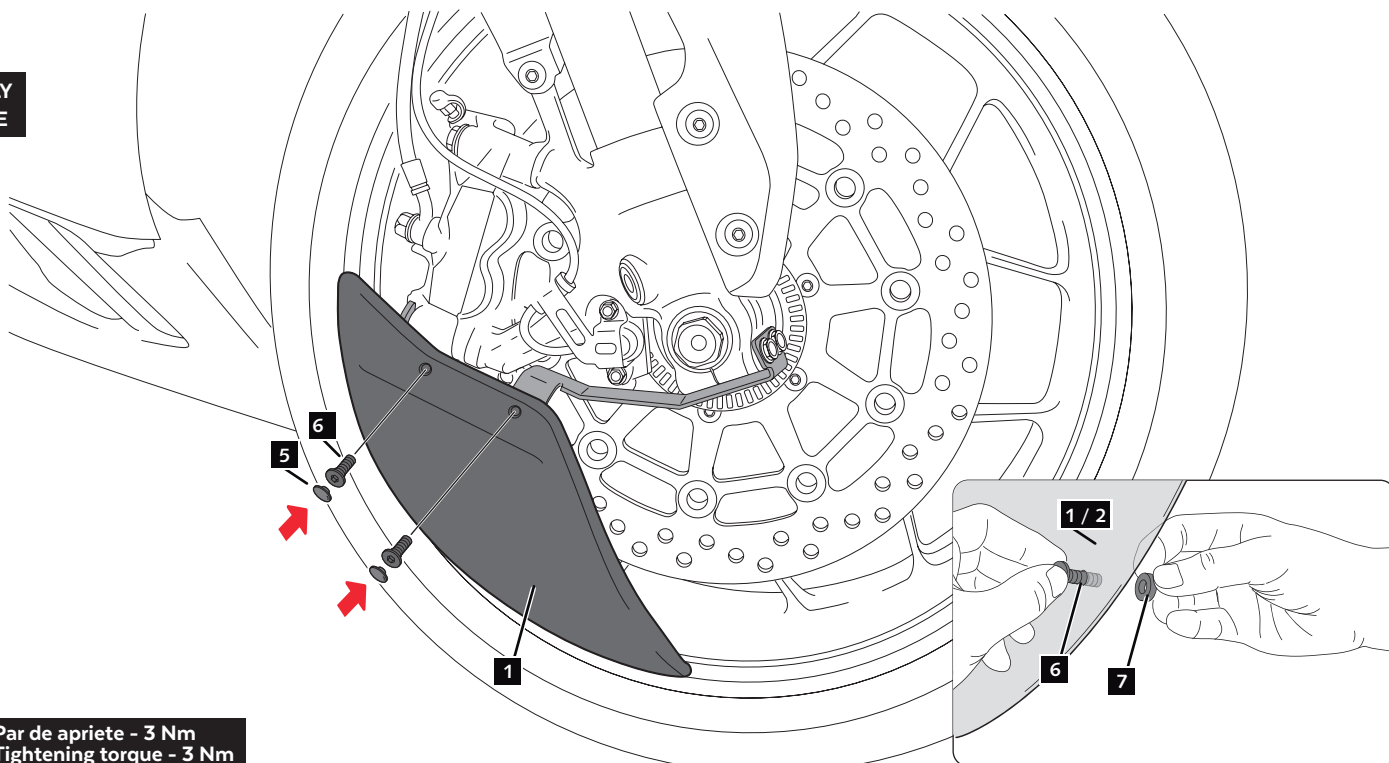

6 Par de apriete - 3 Nm
Tightening torque - 3 Nm