




HEADLIGHT PROTECTOR
ADHERE

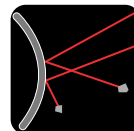

IMPACT RESISTANT



ANTI SCRATCH



INVISIBLE



UV RESISTANT

DUCATI STREETFIGHTER V2 '25-

PART NUMBER : 22738W



QR Video



1 Person




15 min



EASY

ID	PIEZA/PART	DESCRIPCIÓN / DESCRIPTION	QTY	REF
1		Protector de faro / Headlight protector	1	PROTEC----22738

STEP 1

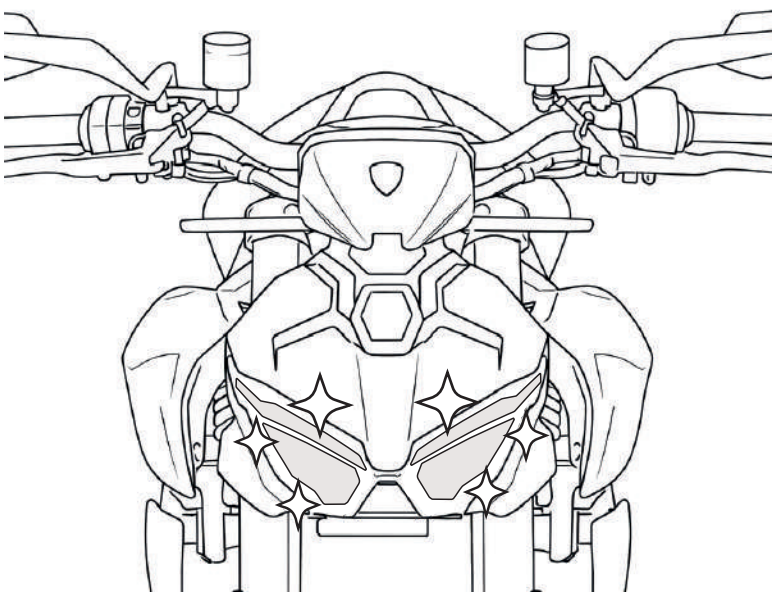


ESP **Limpiar el faro.** Utilizar únicamente un paño limpio y agua con jabón neutro o alcohol isopropílico.
Antes de emplear este u otro tipo de agentes limpiadores verificar que es compatible con el material a limpiar (parte de la moto, faro).
Ante la duda, usar sólo agua con jabón neutro.
Éste es un paso clave para que el resultado final sea óptimo.

ENG **Clean headlight.** Use only a clean cloth and water with neutral soap or isopropyl alcohol.
Before using this or any other type of cleaning agent, verify that it is compatible with the materials to be cleaned (motorbike headlight).
When in doubt, use only water with neutral soap.

This step is key for ensuring a good result and finish of the headlight protector.

STEP 2

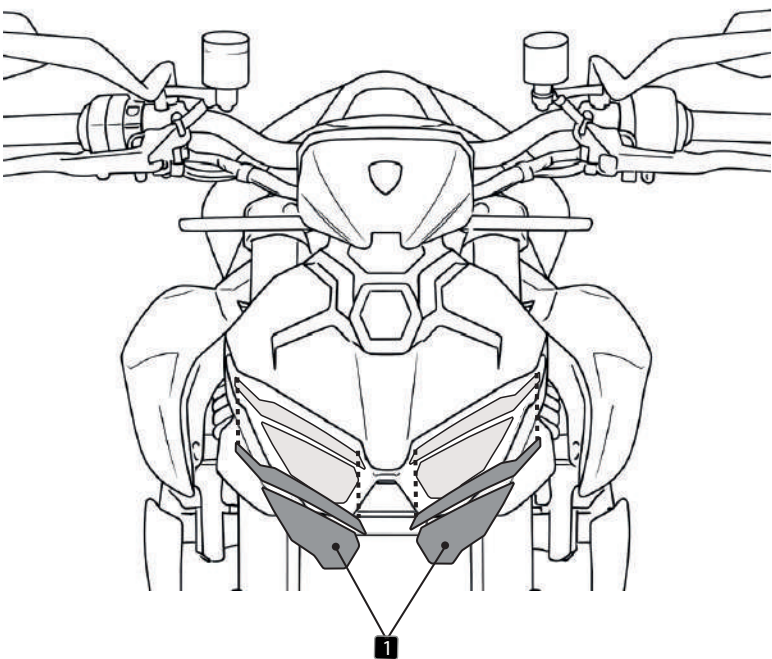

ESP **Manipular el adhesivo con cuidado** de no contaminarlo con grasa, polvo o suciedad (al tocarlo con los dedos).

Rocíe con agua el faro limpio de suciedad. Coloque con cuidado la lámina protectora, hasta colocarla en la posición ideal.

Una vez colocada, empezar a **aplicar presión con la mano** o con una espátula suave del centro hacia los lados para ir eliminando el agua y las burbujas de aire. Es muy importante realizar esta operación con la ayuda de una **pistola de aire caliente (atención: a temperatura mínima) o con un secador de pelo.**

La aplicación ideal del adhesivo se logra cuando la temperatura está entre 21°C y 38°C, y se permite que la unión permanezca estable y sin exponer al sol/viento ni productos de limpieza durante 24 horas.

ENG **Handle the adhesive carefully** so as not to contaminate it with grease, dust or dirt (by touching it with your fingers).

Spray water to the clean headlight, and place the headlight protector. Once we have it on the right position **start applying pressure to eliminate the water and small bubbles of air,** from the center to the edges.

It's very important to perform this operation with the help of **heat gun (attention: at minimum temperature) or with a hair dryer.**

Ideal adhesive application is accomplished when the temperature is between 21°C and 38°C, without exposing it to direct sunlight, wind or cleaning products for 24 hours.