

# HONDA CBR600RR '13-

## M O U N T I N G I N S T R U C T I O N S

REF 22743

REAR SEAT COWL



1 Person













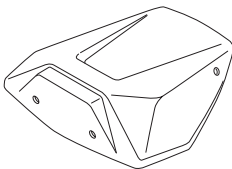

15 min



EASY



ALLEN   
Nº 3  
Nº 4  
Nº 5


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Colín	Rear seat cowl	1	22743J/N/CM3
2		Soporte delantero	Front support	1	SOPOR2P3-D22743
3		Soporte trasero	Rear support	1	SOPOR2P3-T22743
4		Tornillo Allen M5x20 Ø11 ISO 7380	M5x20 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-730
5		Casquillo Ø8,5x Ø13x 3,5	Ø8,5x Ø13x 3,5 Arrowhead	2	CASQUI-----775
6		Tornillo Allen M6x25 Ø14 ISO 7380	M6x25 Ø14 ISO 7380 Allen screw	2	TORNI-I7380-405
7		Casquillo Ø8,5x Ø14x 10	Ø8,5x Ø14x 10 Arrowhead	2	CASQUI-----576
8		Arandela de goma Ø4,5 x Ø11 x 2mm	Ø4,5 x Ø11 x 2mm Rubber washer	4	ARAND-EPDM--722
9		Tornillo Allen M5x12 DIN7991	M5x12 DIN7991 Allen screw	4	TORNI-D7991-611
10		Tapón tornillo M5 DIN7991	M5 DIN7991 Screw cap	4	TAPON-----92
11		Arandela de Nylon M8 ( negra)	M8 Nylon washer	4	ARAND-----799
12		Espuma	Foam	1	ESPUMA----22743

# HONDA CBR600RR '13-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

DISASSEMBLY  
DESMONTAJE

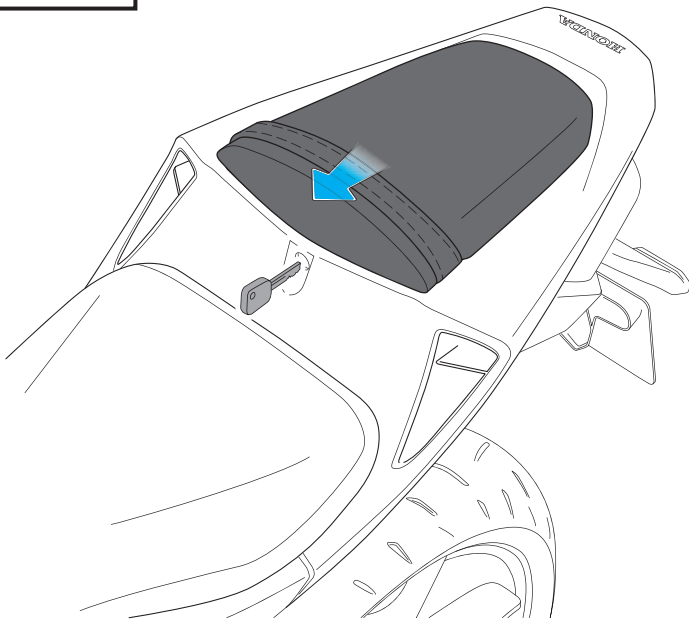


**2**

DISASSEMBLY  
DESMONTAJE

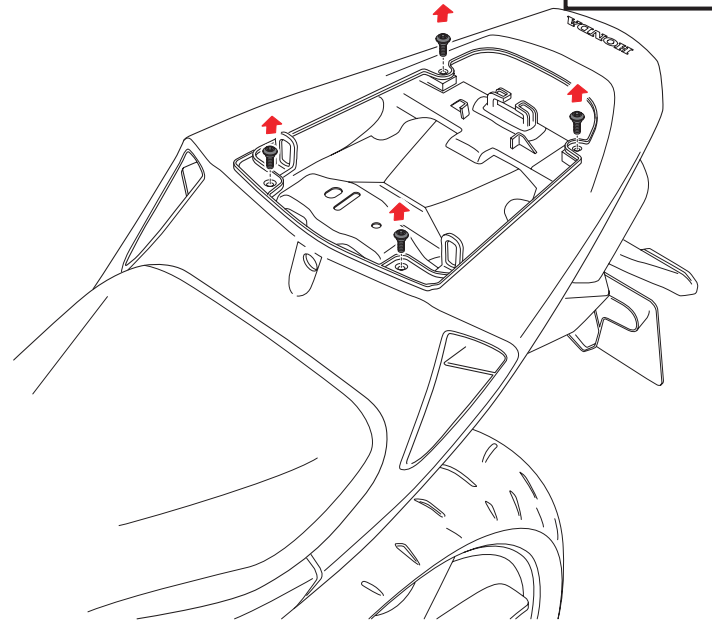

**3**

ASSEMBLY  
MONTAJE

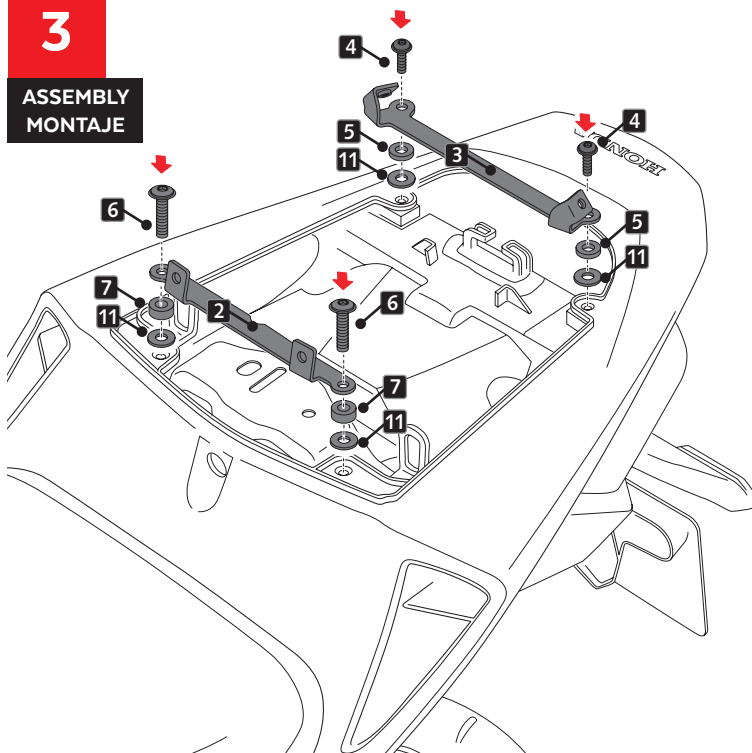

**4**

ASSEMBLY  
MONTAJE

